



A V 8 6

INSTRUCTIONS

1904 CHRONOGRAPH

INTRODUCTION

The 1904 Chronograph is our first watch with a non-round case. Shaped with defined angles, softened edges and a proportion that draws inspiration from early Art Deco design. It's a silhouette built on clarity, symmetry, and clean transitions.

The dial is layered, with cutouts for subdials and a distinct outer groove that frames the layout. Each edition features its own dial finish, but all share the same focus on visual balance.


This is also the first watch in our collection with a fully integrated bracelet and FKM rubber strap. Both developed from scratch to match the case. Tapering from 24mm to 16mm, they connect without lugs, following the curvature of the case for a seamless fit.

A faceted crystal tops the case and mirrors its geometric lines. The subdials include a 24-hour indicator, along with chronograph functions for running seconds and a 30-minute counter.

The result is a watch that looks unlike anything we've made. Lighter than expected, and made to wear like it was built for your wrist. Because it was.

SPECIFICATIONS

Caliber:	EPSON VR31
Battery / Battery life:	SR927W (recommended) Approx. 3 years
Glass:	Faceted Sapphire Crystal with anti-reflective coating
Water Resistance:	5. ATM - Water tested to 50 Meters Suitable for showering and swimming in shallow water

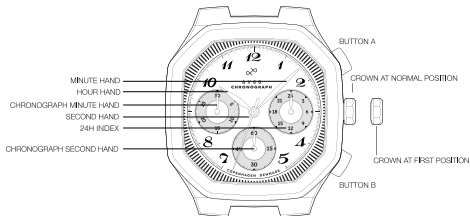

HOW TO SET TIME

1. Pull the crown out to the 1st position
2. Turn the crown clockwise to set hour and minutes hand.
3. Push the crown back into normal position.

USING THE CHRONOGRAPH

MESSURING TIME WITH THE STOPWATCH

Press button "A" to start the chronograph.

When the Chronograph is started you have two options:

Press button "A" to stop the chronograph.

Press button "B" to time split times.

Press button "B" to reset the chronograph minute and seconds hands when chronograph is stopped.

The chronograph hands will return to their Zero positions.

CHRONOGRAPH RESET (INCL: AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the Zero position.

1. Pull the crown out to the 1st click position
2. Press the button "A" to set the chronograph second hand to the Zero position (Clockwise)
3. Press the button "B" to set the chronograph second hand to the Zero position (Counterclockwise)
4. Once the hands are set at Zero position, reset the time and return the crown to its normal position.



A V 8 6

CELEBRATE YOUR MOMENT

Go to www.AV86.com for warranty information